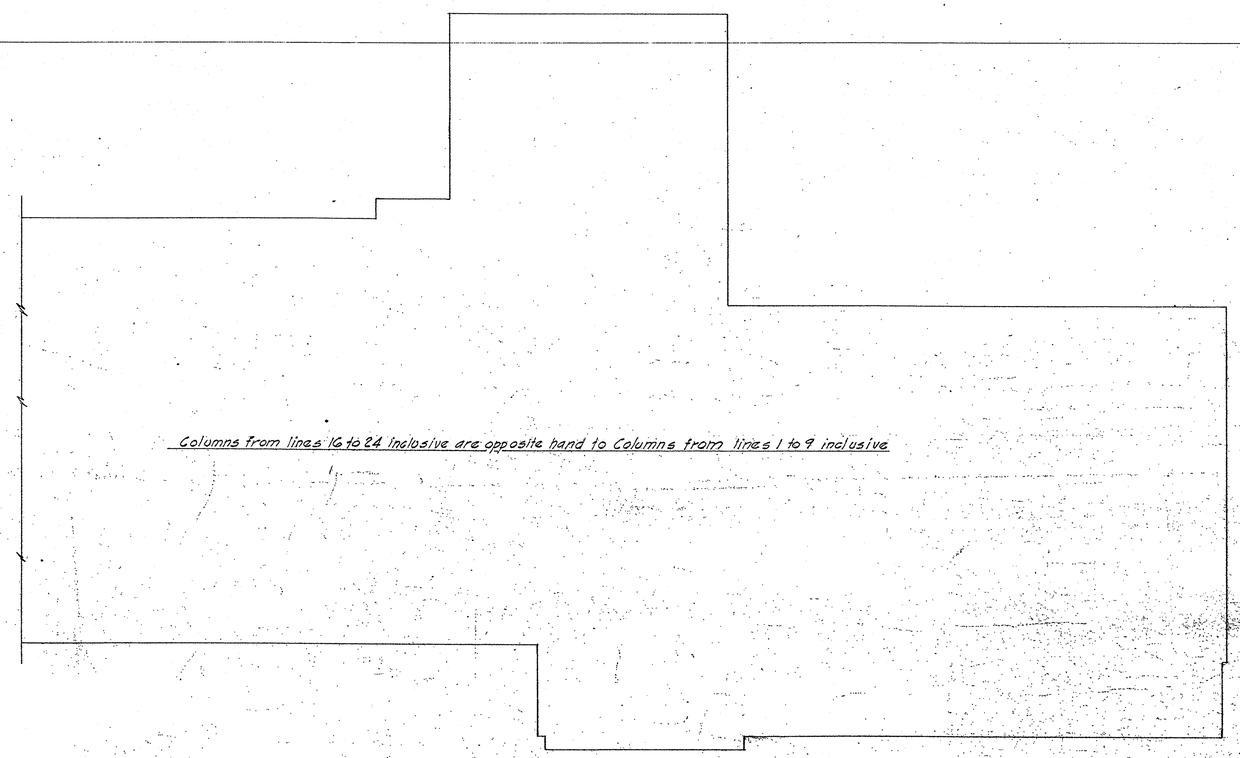

Columns from lines 16 to 24 inclusive are opposite hand to Columns from lines 1 to 9 inclusive

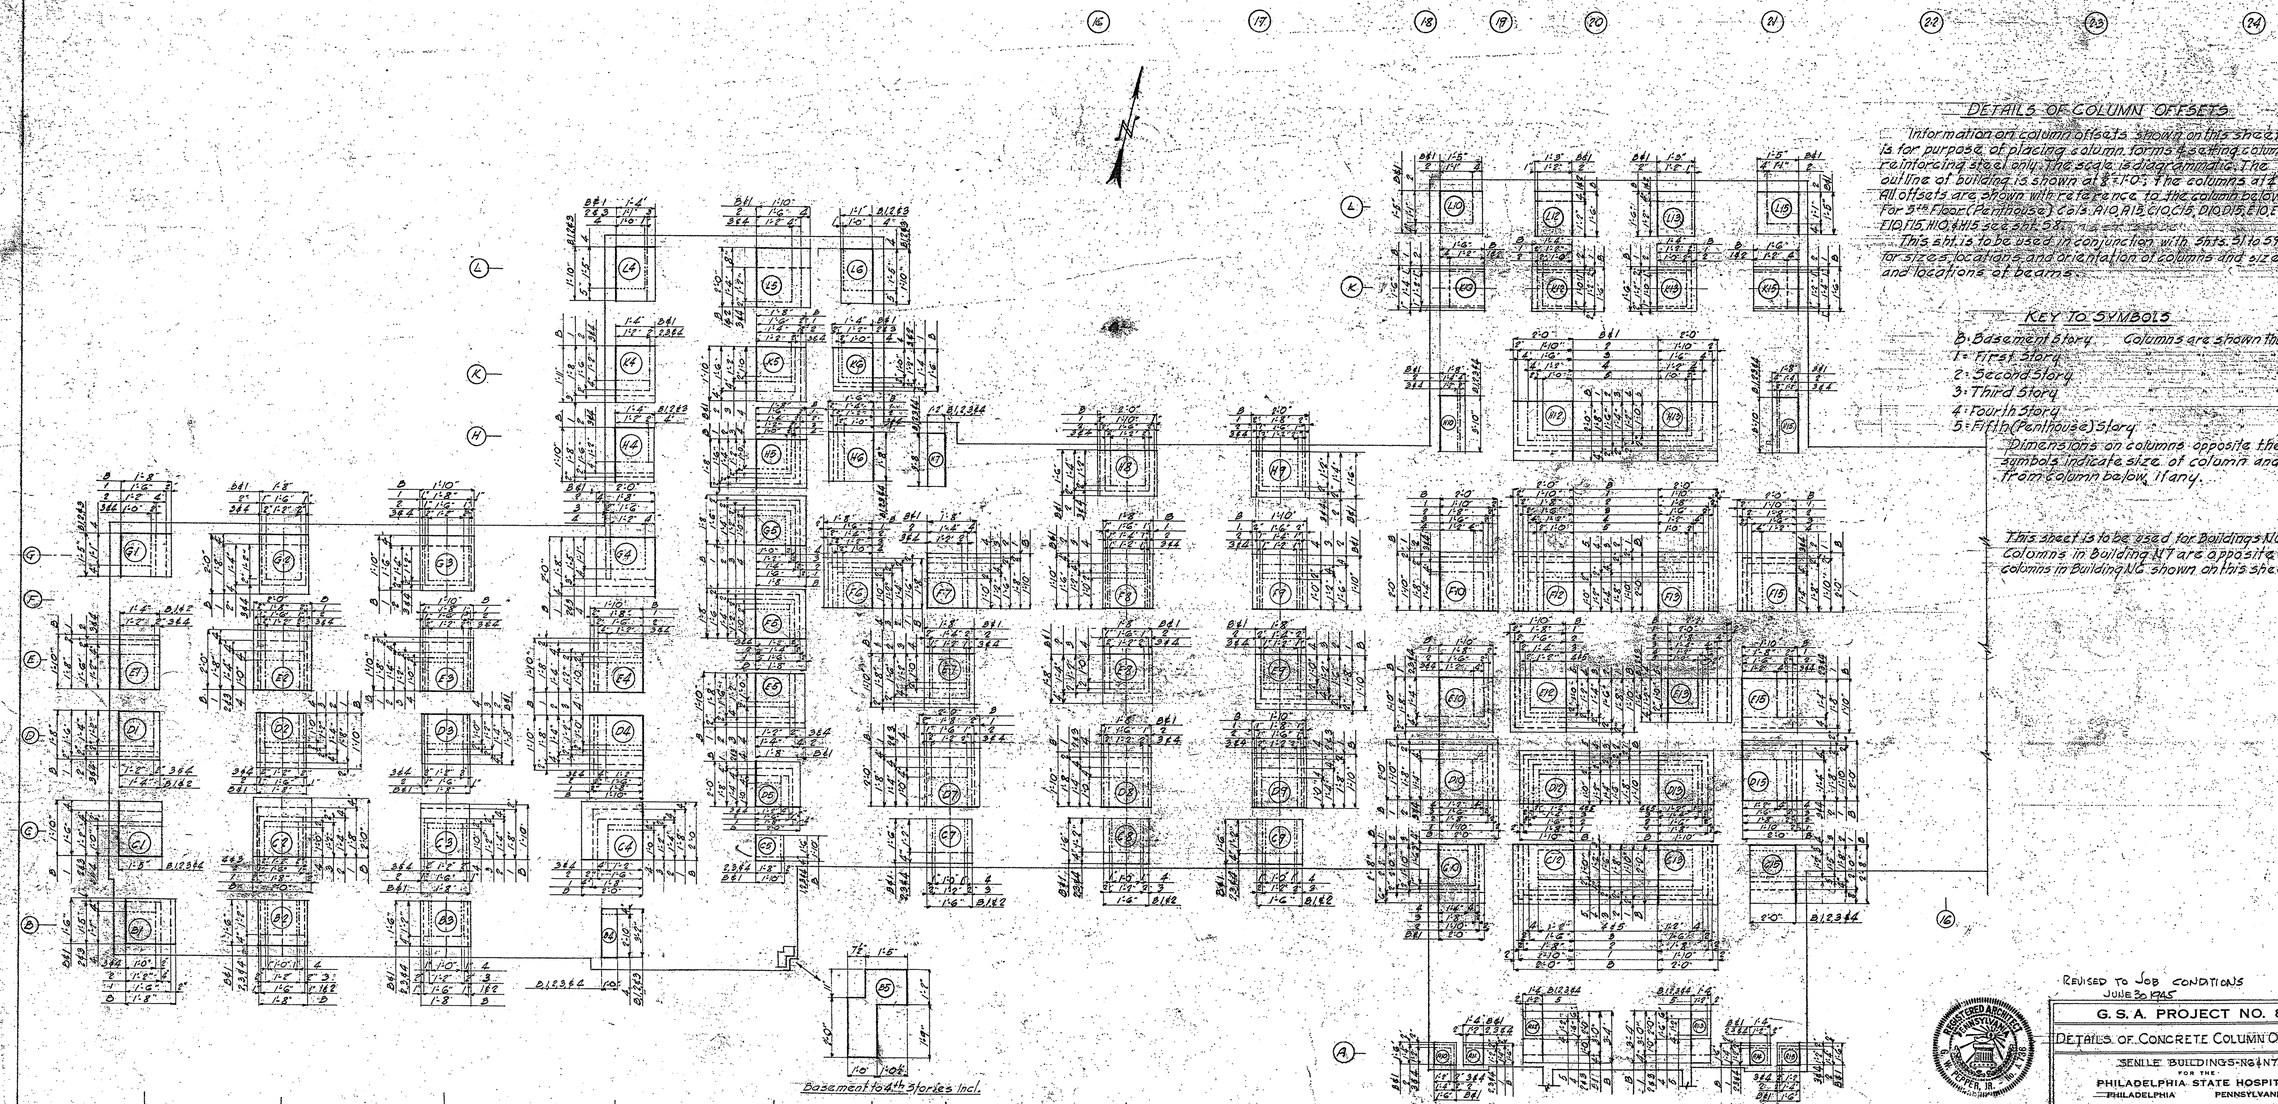

Basement to 4th Stories Incl.

DETAILS OF COLUMN OFFSETS

Information on column offsets shown on this sheet is for purpose of placing column forms & setting column reinforcing steel only. The scale is diagrammatic. The outline of building is shown at 1/8"=1'-0". All offsets are shown with reference to the column below. For 5th Floor (Penthouse) Cols. A10, A18, C10, C15, D10, D15, E10, E15, F10, F15, H10, & H15 see sht. S8.

This sht. is to be used in conjunction with shts. S1 to S7 incl. for sizes, locations and orientation of columns and sizes and locations of beams.

KEY TO SYMBOLS

B: Basement Story — Columns are shown thus:
1: First Story
2: Second Story
3: Third Story
4: Fourth Story
5: Fifth (Penthouse) Story

Dimensions on columns opposite these symbols indicate size of column and offset from column below, if any.

This sheet is to be used for Buildings N & N.T. Columns in Building N.T. are opposite hand to columns in Building N. shown on this sheet.

REVISED TO JOB CONDITIONS JUNE 30 1945

G. S. A. PROJECT NO. 80F

DETAILS OF CONCRETE COLUMN OFFS.

SENILE BUILDINGS-N & N.T.

FOR THE PHILADELPHIA STATE HOSPITAL
PHILADELPHIA PENNSYLVANIA

GEORGE W. PEPPER, JR. 1600 WALNUT STREET, — REGISTERED PHIL.

DATE April 24 '40 — SCALE As Noted

THE GENERAL STATE AUTHORITY
ARTHUR H. JAMES — PRESIDENT
WILLIAM S. LIVENGOOD, JR. — SECRETARY
DAVID H. DIEHL — EXEC. DIRECTOR
HARRISBURG, PENNSYLVANIA

HORACE B. NICHOLSON
CONSULTING ENGINEER
1600 WALNUT ST.
PHILA., PA.

SHEET NO. S-10